

EXPORTPAPERSPACE System Variable — GstarCAD 2027

3003 kbadmin September 25, 2026 [System Variable Reference](#) 0 5

EXPORTPAPERSPACE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > E System Variables > EXPORTPAPERSPACE

Function Description:

The EXPORTPAPERSPACE system variable is used to specify which part of drawing in layout space to export to a DWF, DWFx or PDF file.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1,2

System Variable Value:

- 0:display
- 1:extent
- 2>window

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3003>