

BACKZ System Variable — GstarCAD 2027

BACKZ System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > B System Variables > BACKZ

Function Description:

The BACKZ system variable is used to set the offset value from clipping plane to target plane when saving current viewports by drawing units.
(Read-Only)

Type	Integer
Saved in	Drawing
Initial value	0.0000

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)