

BACTIONBARMODE System Variable — GstarCAD 2027

BACTIONBARMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > B System Variables > BACTIONBARMODE

Function Description:

The BACTIONBARMODE system variable is used to control whether to display action bar or traditional action objects in block editor.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** display traditional action objects in block editor
 - 1:** display action bar in block editor
- Note:** when the BACTIONBARMODE system variable has set to be 1, the BACTIONSET, BASSOCIATE, and BLOOKUPTABLE commands are disabled.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3079>