

BINDTYPE System Variable — GstarCAD 2027

BINDTYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > B System Variables > BINDTYPE

Function Description:

The BINDTYPE system variable is used to control the way to deal with external reference name which is binding or in-place editing.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0:**traditional binding way
- 1:**similar to INSERT

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3085>