

BLIPMODE System Variable — GstarCAD 2027

BLIPMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > B System Variables > BLIPMODE

Function Description:

The BLIPMODE system variable is used to control the visibility of marker blips.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

0: turn off marker blips

1: lturn on marker blips

This system variable has the same name as the BLIPMODE command.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3086>