

BPTEXTHORIZONTAL System Variable — GstarCAD 2027

BPTEXTHORIZONTAL System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > B System Variables > BPTEXTHORIZONTAL

Function Description:

The BPTEXTHORIZONTAL system variable is used to force the text of action parameters and constraint parameters displaying in horizontal way.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** align the text and parameter dimension line
 - 1:** the action parameter and constraint parameter text display in horizontal way in block editor
- The BPTEXTHORIZONTAL system variable is applicable to action parameters and block constraint parameters.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3092>