

BVMODE System Variable — GstarCAD 2027

BVMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > B System Variables > BVMODE

Function Description:

The BVMODE system variable is used to control the display way of hidden object under current visibility state in block editor.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0:**specify the hidden object to be invisible
- 1:** specify the hidden object to be visible but in dark

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3094>