

UCSAXISANG System Variable — GstarCAD 2027

UCSAXISANG System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > U System Variables > UCSAXISANG

Function Description:

The UCSAXISANG system variable is used to store the default angle when rotating the UCS around one of its axis by using the X, Y, or Z options of USC command.

Type	Integer
Saved in	Registry
Initial value	90
Range	5,10,15,18,22.5,30,45,90,180

The value of UCSAXISANG system variable must be entered as an angle in degrees.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)