

UCSBASE System Variable — GstarCAD 2027

UCSBASE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > U System Variables > UCSBASE

Function Description:

The UCSBASE system variable is used to store the the name of UCS that defined the original point and direction for ortho UCS settings.

Type	Strings
Saved in	Drawing
Initial value	""

The valid value can be any named UCS..

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)