

UCSORG System Variable — GstarCAD 2027

UCSORG System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > U System Variables > UCSORG

Function Description:

The UCSORG system variable is used to store the current users coordinate original point in current viewport of current space.
(Read-Only)

Type	3D point
Saved in	Drawing
Initial value	0.0000,0.0000,0.0000

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)