

UCSORTHO System Variable — GstarCAD 2027

UCSORTHO System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > U System Variables > UCSORTHO

Function Description:

The UCSORTHO system variable is used to determine whether the XY plan of UCS automatically aligns with current view plan when restored an ortho view.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** keep the UCS unchanged when an orthographic view is restored
- 1:** align the UCS automatically when an orthographic view is stored

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3104>