

UNDOCTL System Variable — GstarCAD 2027

UNDOCTL System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > U System Variables > UNDOCTL

Function Description:

The UNDOCTL system variable is used to display options used in UNDO command.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	53

The setting is stored as a bitcode using the sum of listed system variable values.

System Variable Value:

- 0:** turn off UNDO
- 1:** turn on UNDO
- 2:** only one command can be undone
- 4:** Auto is turned on
- 8:** one group is active
- 16:**treat ZOOM and PAN as one single action
- 32:** Layer property operations are grouped as a single action

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3109>