

UNDOMARKS System Variable — GstarCAD 2027

UNDOMARKS System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > U System Variables > UNDOMARKS

Function Description:

The UNDOMARKS system variable is used to display the mark number placed in UNDO control stream.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	0

If one group is currently active, the Mark and Back options are disabled.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)