

UNITMODE System Variable — GstarCAD 2027

UNITMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > U System Variables > UNITMODE

Function Description:

The UNITMODE system variable is used to display format of units.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0:** display fractional, feet-inches, and surveyor' angle according to Report format separated by spaces
1: display fractional, feet-inches, and surveyor' angle according to Input format without including spaces, but substituting dashes for spaces in some cases.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3111>