

UPDATETHUMBNAIL System Variable — GstarCAD 2027

UPDATETHUMBNAIL System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > U System Variables > UPDATETHUMBNAIL

Function Description:

The UPDATETHUMBNAIL system variable is used to control the update of thumbnail preview for view and layout.

Type	Bitcode
Saved in	Drawing
Initial value	15
Range	0 ~ 16

System Variable Value:

- 0:** do not update preview
- 1:** update preview of views in model space
- 2:** update preview of views in layout
- 4:** update preview of layout
- 8:** update preview when created, modified, or restored layout or views
- 16:** update preview when saving a drawing

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3114>