

OBJECTISOLATIONMODE System Variable — GstarCAD 2027

OBJECTISOLATIONMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > O System Variables > OBJECTISOLATIONMODE

Function Description:

The OBJECTISOLATIONMODE system variable is used to control whether hidden objects remain hidden between drawing sessions.

Type	Integer
Saved in	User -settings
Initial value	0
Range	0,1

System Variable Value:

- 0:** temporarily isolated/hidden objects for current drawing session
- 1:** persist isolated/hidden objects for current drawing session

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3115>