

OFFSETGAPTYPE System Variable — GstarCAD 2027

OFFSETGAPTYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > O System Variables > OFFSETGAPTYPE

Function Description:

The OFFSETGAPTYPE system variable is used to control how to deal with the potential gap between segments when offsetting polylines.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1,2

System Variable Value:

- 0:** extend segment to projected intersection point
- 1:** fillet lines at projected intersection point. The radius of each arc segment equal to offset distances.
- 2:** chamfer lines at projected intersection point. The distance from each chamfer of original object to its vertex equals to offset distance.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3119>