

# OLEFRAME System Variable — GstarCAD 2027

## OLEFRAME System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > O System Variables > OLEFRAME

### Function Description:

The OLEFRAME system variable is used to control whether to display and plot frames of all OLE objects.

|               |         |
|---------------|---------|
| Type          | Integer |
| Saved in      | Drawing |
| Initial value | 2       |
| Range         | 0,1,2   |

It must display OLE object frames to make grips visible.

### System Variable Value:

- 0:** do not display and plot frames
- 1:** display and plot frames
- 2:** display but do not plot frames

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3120>