

ORTHOMODE System Variable — GstarCAD 2027

ORTHOMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > O System Variables > ORTHOMODE

Function Description:

The ORTHOMODE system variable is used to constrain cursor movement in perpendicular direction.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

When the ORTHOMODE is on, the cursor can move horizontally and perpendicularly relative to UCS and current grid rotation angle.

System Variable Value:

- 0:** turn ortho mode off
- 1:** turn ortho mode on

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3125>