

OSDISTANCE System Variable — GstarCAD 2027

3126 kbadmin September 25, 2026 [System Variable Reference](#) 0 12

OSDISTANCE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > O System Variables > OSDISTANCE

Function Description:

The OSDISTANCE system variable is used to specify the distance from endpoint for Osnap.

Type	Real
Saved in	Drawing
Initial value	100
Range	>0

Other versions with matching text

[2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3126>