

OSMODE System Variable — GstarCAD 2027

OSMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > O System Variables > OSMODE

Function Description:

The OSMODE system variable is used to set the object snap running mode.

Type	Bitcode
Saved in	Registry
Initial value	4133

System Variable Value:

- 0:** none
- 1:** END (point)
- 2:** MID (middle point)
- 4:** CEN (center point)
- 8:** NOD (node)
- 16:** QUAdrant
- 32:** INTersection
- 64:** INSertion
- 128:** PERpendicular
- 256:**TAN(tangent point)
- 512:**NEA(nearest point)
- 1024:** Geometric CEnter
- 2048:** APP (apparent intersection)

4096: EXTension

8192: PAR (parallel)

16384: Suppresses the current running object snaps

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3128>