

OSMODE2 System Variable — GstarCAD 2027

OSMODE2 System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > O System Variables > OSMODE2

Function Description:

The OSMODE2 system variable needs to be used in conjunction with OSMODE as detailed in the table below.

Type	Bitcode
Saved in	Registry
Initial value	4

System Variable Value:

OSMODE Value	OSMODE2 Value	Description
4096	0	Close all snaps.
	1	Only "Distance from Endpoint" snap is enabled.
	2	Only "Divide" snap is enabled.
	4	Only "Extension" snap is enabled.
	≤7	To specify more than one running object snap, enter the sum of their values. For example, enter 7 (4+2+1) to specify that "Extension", "Divide", "Distance from Endpoint" snaps are enabled.

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3129>