

OSNAPNODELEGACY System Variable — GstarCAD 2027

OSNAPNODELEGACY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > O System Variables > OSNAPNODELEGACY

Function Description:

The OSNAPNODELEGACY system variable is used to control whether the "NOD" object snap can be used for snapping mtext.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

The node number and location for mtext object snap are determined by the mtext justification in vertical and horizontal direction.

System Variable Value:

- 0:** the "NOD" object snap can be applied on snapping mtext.
- 1:** the "NOD" object snap can be ignored for snapping mtext.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3131>