

VIEWCTR System Variable — GstarCAD 2027

VIEWCTR System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > V System Variables > VIEWCTR

Function Description:

The VIEWCTR system variable is used to store the center of view in current viewport.
(Read-Only)

Type	3D point
Saved in	Drawing
Initial value	Unknown

It is expressed by UCS coordinates.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)