

VIEWDIR System Variable — GstarCAD 2027

VIEWDIR System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > V System Variables > VIEWDIR

Function Description:

The VIEWDIR system variable is used to store the view direction by UCS coordinates in current viewport.
(Read-Only)

Type	3D vector
Saved in	Drawing
Initial value	0.0000,0.0000,1.0000

It describes the camera point as the 3D offset value of target point.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)