

VIEWTWIST System Variable — GstarCAD 2027

3141 kbadmin September 25, 2026 [System Variable Reference](#) 0 20

VIEWTWIST System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > V System Variables > VIEWTWIST

Function Description:

The VIEWTWIST system variable is used to store the view rotation angle measured relative WCS in current viewport.
(Read-Only)

Type	Real
Saved in	Drawing
Initial value	0.0000

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3141>