

VPROTATEASSOC System Variable — GstarCAD 2027

VPROTATEASSOC System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > V System Variables > VPROTATEASSOC

Function Description:

The VPROTATEASSOC system variable is used to control whether the view in viewport is rotated together with viewport when rotating the viewport.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** views in viewport do not rotate together with viewport when rotating the viewport
- 1:** views in viewport rotate together to match the rotation of viewport when rotating the viewport

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3144>