

VSSILHWIDTH System Variable — GstarCAD 2027

VSSILHWIDTH System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > V System Variables > VSSILHWIDTH

Function Description:

The VSSILHWIDTH system variable is used to specify the width in pixels of silhouette edges in the current viewport.

Type	Integer
Saved in	Drawing
Initial value	5
Range	1~25

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)