

FACETERMESHTYPE System Variable — GstarCAD 2027

FACETERMESHTYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > F System Variables > FACETERMESHTYPE

Function Description:

The FACETERMESHTYPE system variable is used to set type for new meshes.

Type	Integer
Saved in	User-settings
Initial value	0
Range	0,1,2

System Variable Value:

- 0:** convert objects to optimized mesh objects with fewer faces
- 1:** convert objects to faces, most of them are quadrilaterals
- 2:** convert objects to faces, most of them are triangles

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3160>