

FACETERMINUGRID System Variable — GstarCAD 2027

FACETERMINUGRID System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > F System Variables > FACETERMINUGRID

Function Description:

The FACETERMINUGRID system variable is used to set internal parameters.

Type	Real
Saved in	User-settings
Initial value	0
Range	0 ~ 1023

The value of FACETERMINUGRID can not be larger than FACETERMAXGRID.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)