

FACETERSMOOTHLEV System Variable — GstarCAD 2027

FACETERSMOOTHLEV System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > F System Variables > FACETERSMOOTHLEV

Function Description:

The FACETERSMOOTHLEV system variable is used to set the default smooth level for converted mesh objects.

Type	Integer
Saved in	User-settings
Initial value	1

System Variable Value:

- 1 or any negative:** please do not smooth objects after converting
 - 0:** please do not smooth objects after converting
 - 1:** apply smooth level 1 after converting
 - 2:** apply smooth level 2 after converting
 - 3:** apply smooth leve l3 after converting
- This system variable must be smaller than SMOOTHMESHMAXLEV.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3164>