

FIELDDISPLAY System Variable — GstarCAD 2027

FIELDDISPLAY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > F System Variables > FIELDDISPLAY

Function Description:

The FIELDDISPLAY system variable is used to control whether to display field with gray background.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

Do not to plot background.

System Variable Value:

- 0:** display field without background
- 1:** display field with gray background

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3167>