

FONTALT System Variable — GstarCAD 2027

3172 kbadmin September 25, 2026 [System Variable Reference](#) 0 8

FONTALT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > F System Variables > FONTALT

Function Description:

The FONTALT system variable is used to specify the alternate text for the text file which can not be located.

Type

Saved in	Real Registry
Initial value	simplex.shx

It displays "Alternate Font" dialog box when a drawing file with a defined text style is opened and an alternate font is not specified.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3172>