

# FRONTZ System Variable — GstarCAD 2027

## FRONTZ System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > F System Variables > FRONTZ

### Function Description:

The FRONTZ system variable is used to store the offset from current front clipped plane to target plane in drawing units.  
(Read-Only)

|               |         |
|---------------|---------|
| Type          | Real    |
| Saved in      | Drawing |
| Initial value | 0.0000  |

### Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)