

FULLOPEN System Variable — GstarCAD 2027

FULLOPEN System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > F System Variables > FULLOPEN

Function Description:

The FULLOPEN system variable is used to indicate whether the current drawing is partly opened or not.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	1
Range	0,1

System Variable Value:

- 0:** indicate that the drawing is partly opened
- 1:** indicate that the drawing is fully opened

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3176>