

FULLPLOTPATH System Variable — GstarCAD 2027

FULLPLOTPATH System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > F System Variables > FULLPLOTPATH

Function Description:

The FULLPLOTPATH system variable is used to control whether send the full path of drawing files to background plot or not.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:**only send drawing file name
- 1:** send full path of drawing file

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3177>