

IMAGEHLT System Variable — GstarCAD 2027

IMAGEHLT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > I System Variables > IMAGEHLT

Function Description:

The IMAGEHLT system variable is used to control whether the entire raster image or only the raster image frame is highlighted.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** highlights only the raster image frame
- 1:** highlights the entire raster image

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3180>