

INPUTHISTORYMODE System Variable — GstarCAD 2027

INPUTHISTORYMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > I System Variables > INPUTHISTORYMODE

Function Description:

The INPUTHISTORYMODE system variable is used to control the content and location of users 'input history.

Type	Bitcode
Saved in	Registry
Initial value	15
Range	0 ~ 15

System Variable Value:

- 0:** do not display input history
- 1:** display recent input history in command line or at dynamic prompts. Users can access input history in command line or at dynamic prompts by pull-down arrowhead or pull-up arrowhead.
- 2:** display recent input history record of current command in shortcut menu of ""recent input
- 4:** display all recent input history record of all commands in current task in shortcut menu of "recent input"
- 8:** display location mark of recent input point. Specify point location by arrowhead at command prompts

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3185>