

INSBASE System Variable — GstarCAD 2027

INSBASE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > I System Variables > INSBASE

Function Description:

The INSBASE system variable is used to store the insertion base point of BASE command by current UCS coordinates.

Type	3D point
Saved in	Drawing
Initial value	0.0000,0.0000,0.0000

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)