

INSUNITSDEFSOURCE System Variable — GstarCAD 2027

3191 kbadmin September 25, 2026 [System Variable Reference](#) 0 9

INSUNITSDEFSOURCE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > I System Variables > INSUNITSDEFSOURCE

Function Description:

The INSUNITSDEFSOURCE system variable is used to set the original content unit value when the INSUINTS system variable set to be 0.

Type	Integer
Saved in	Registry
Initial value	1
Range	0 ~ 20

System Variable Value:

- 0: unspecified(no units)
- 1: inches
- 2: feet
- 3: miles
- 4: millimeters
- 5: centimeters
- 6: meters
- 7: kilometers
- 8: micro inches
- 9: mils
- 10: yards

- 11: angstroms
- 12: nanometers
- 13: microns
- 14: decimeters
- 15: dekameters
- 16: hectometers
- 17: gigameters
- 18: astronomical units
- 19: light years
- 20: parsecs

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3191>