

INTERFERECOLOR System Variable — GstarCAD 2027

INTERFERECOLOR System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > I System Variables > INTERFERECOLOR

Function Description:

The INTERFERECOLOR system variable is used to control the color of interference objects.

Type	Strings
Saved in	Drawing
Initial value	1

The valid value can be "BYLAYER", "BYBLOCK", color name, and an integer from 0 to 255.
The valid value of true color is an integer strings with a RGB in front. Each integer is separated by a comma. It is input in the following way: RGB:000,000,000
.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)