

ACISOUTVER System Variable — GstarCAD 2027

ACISOUTVER System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > A System Variables > ACISOUTVER

Function Description:

The ACISOUTVER system variable is used to control the ACIS version of SAT files which created by ACISOUT command.

Type	Integer
Saved in	Not saved
Initial value	70
Range	15 ~ 120

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)