

ANGDIR System Variable — GstarCAD 2027

ANGDIR System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > A System Variables > ANGDIR

Function Description:

The ANGDIR system variable is used to set the direction of positive angle.It is measures from angle 0 relative to the orientation of current UCS.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0: anticlockwise
- 1: clockwise

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3238>