

ANNOTATIVEDWG System Variable — GstarCAD 2027

ANNOTATIVEDWG System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > A System Variables > ANNOTATIVEDWG

Function Description:

The ANNOTATIVEDWG system variable is used to specify whether a drawing displaying as an annotation block when inserting to another drawing.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0:** non- annotative
- 1:** annotative

Note: if the drawing contains annotative objects, the ANNOTATIVEDWG system variable changes to be read-only.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3241>