

APPLYGLOBALOPACITIES System Variable — GstarCAD 2027

APPLYGLOBALOPACITIES System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > A System Variables > APPLYGLOBALOPACITIES

Function Description:

The APPLYGLOBALOPACITIES system variable is used to apply all opacity settings to global palettes. This system variable determines the default setting for the Transparency dialog box Apply These Settings to All Palettes option.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

0: turn opacity settings off **1:** turn opacity settings on

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3244>