

AREA System Variable — GstarCAD 2027

AREA System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > A System Variables > AREA

Function Description:

The AREA system variable is used to store the last one area value calculated by AREA command.
(Read only)

Type	Integer
Saved in	Not saved
Initial value	0.0000

The name of AREA system variable is the same as AREA command.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)