

ATTMODE System Variable — GstarCAD 2027

ATTMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > A System Variables > ATTMODE

Function Description:

The ATTMODE system variable is used to control the display of object attributes.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0 ~ 2

System Variable Value:

0: off; all attributes invisible
1: normal; keep their current visibility of all attributes; display all visible attributes and hide all invisible attributes. **2:** on; all attributes visible

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3247>