

AUNITS System Variables — GstarCAD 2027

AUNITS System Variables

[GstarCAD 2027](#) · [System Variables](#)

System Variables > A System Variables > AUNITS

Function Description:

The AUNITS system variable is used to set angle units.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0 ~ 4

System Variable Value:

0: decimal degrees **1:** degrees / minutes /seconds **2:** gradian **3:** radians **4:** surveyor's units

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)