

AUPREC System Variables — GstarCAD 2027

AUPREC System Variables

[GstarCAD 2027](#) · [System Variables](#)

System Variables > A System Variables > AUPREC

Function Description:

The AUPREC system variable is used to set the display precious of angle units and ordinates.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0 ~ 8

No matter how to set precious value, it keeps the internal precious values for angles and ordinates. The AUPREC system variable has no effect on precious of annotation text.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)