

OLESCALE Command — GstarCAD 2027

3297 kbadmin September 25, 2026 [Command Reference](#) 0 23

OLESCALE Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > O Command > OLESCALE

Function Description:

This command is used to control the size, scale and other properties of selected OLE objects. You must select an OLE object before entering the command. The [OLE Text Size dialog box](#) is displayed.

Command Access:

Icon: /

Menu: /

Ribbon: /

Toolbar: /

Command: OLESCALE

Alias: /

Shortcut: Select an OLE object and right-click, select Ole and click Text Size

Command Prompts:

/

Related References?

- [Commands about Object Linking and Embedding OLE](#)

Related Concepts?

- [About Editing OLE Objects](#)

Related Tasks?

- [To Edit a Linked Drawing From Within the Destination Application](#)
- [To Edit a Linked Drawing in the Source Application](#)
- [To Turn on or turn off the Display of OLE Frames](#)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3297>